





**BASE CABINET – DRAWERS**  
Assembled with the use of confirmats


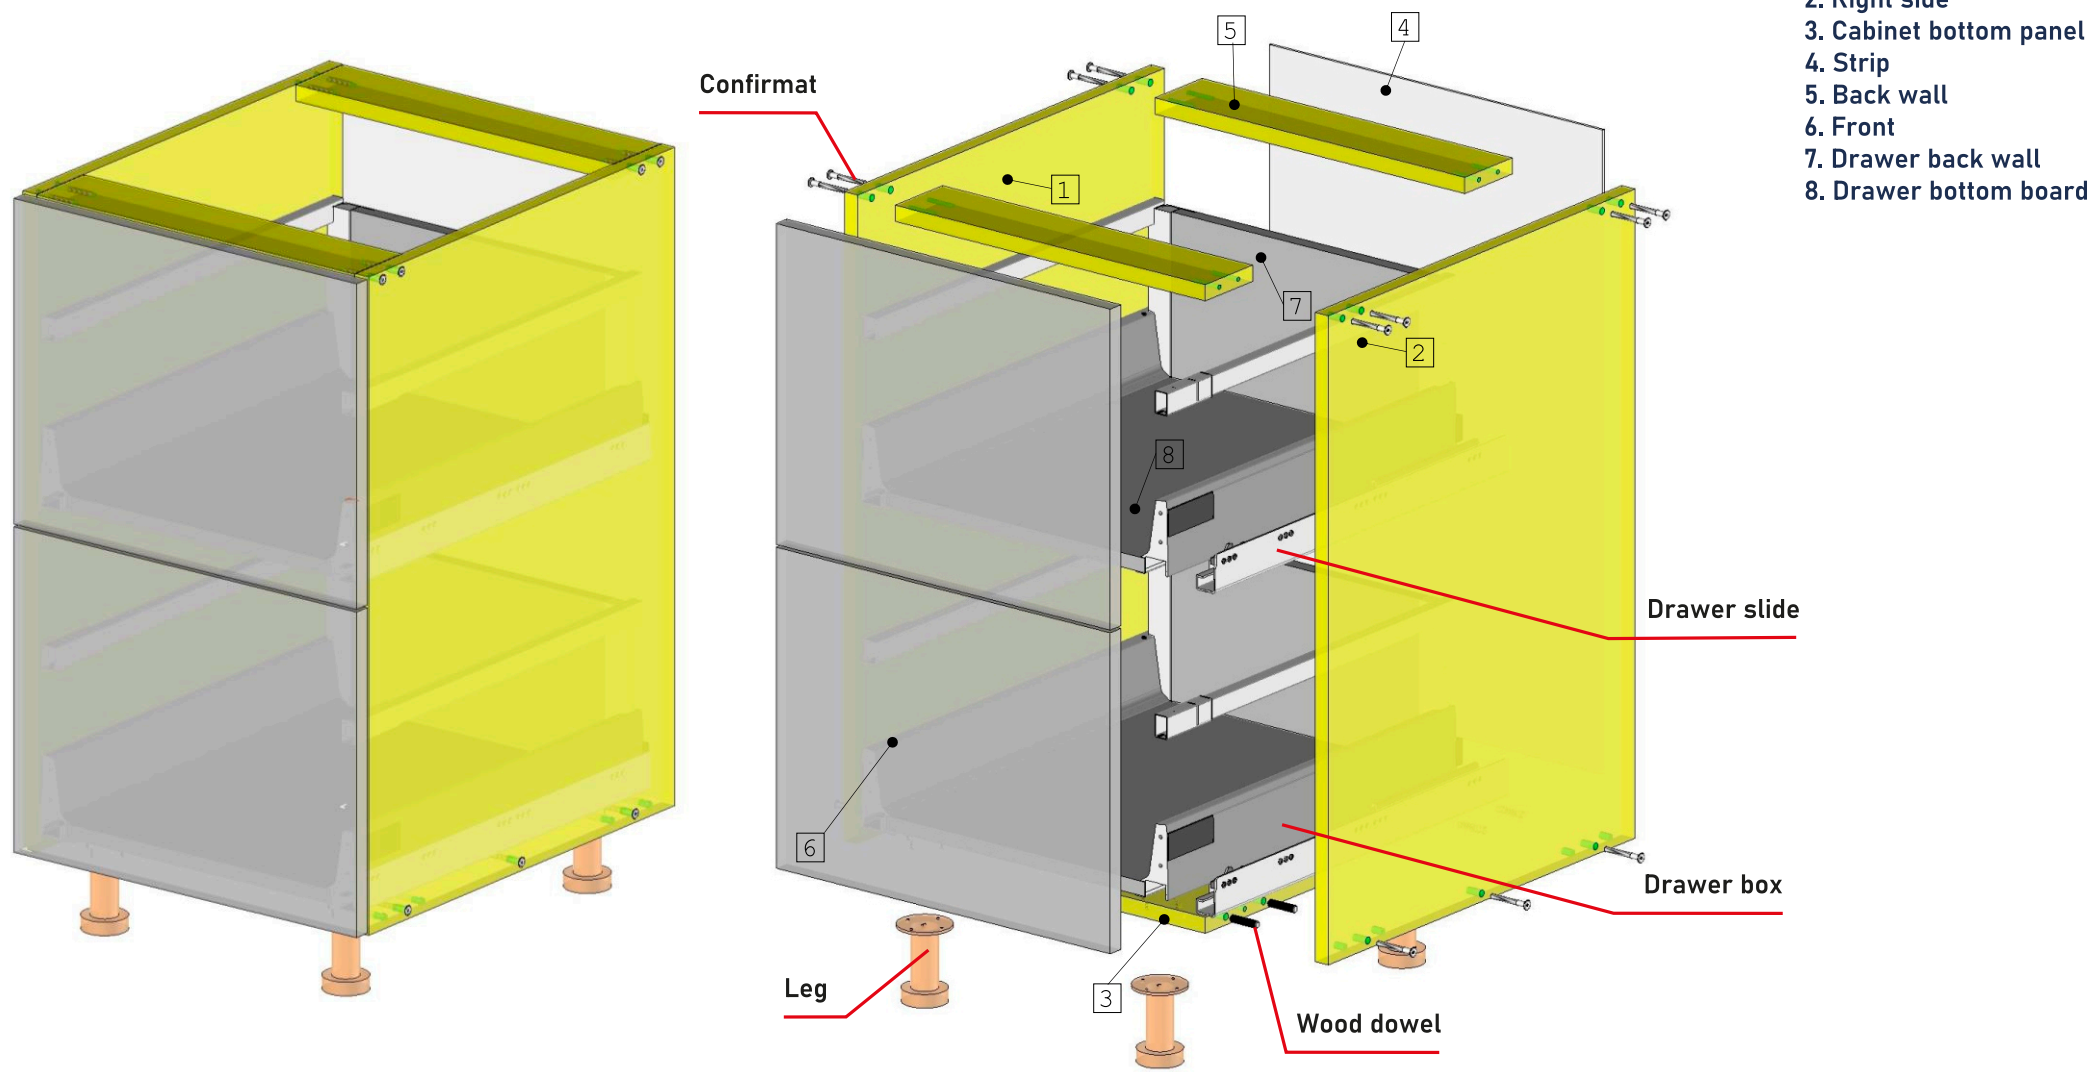





**BASE CABINET – DRAWERS**  
Assembled with the use of confirmats



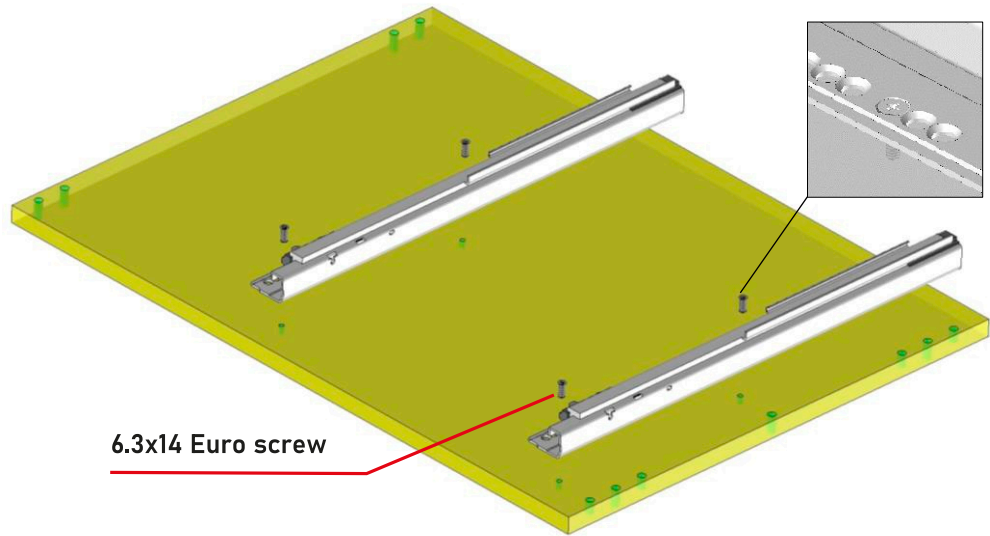


6.3x14 Euro screw

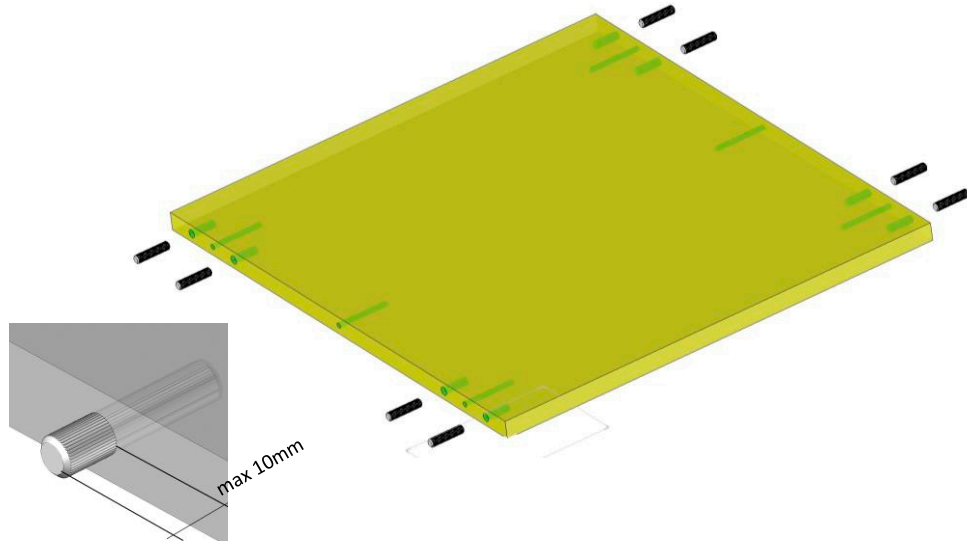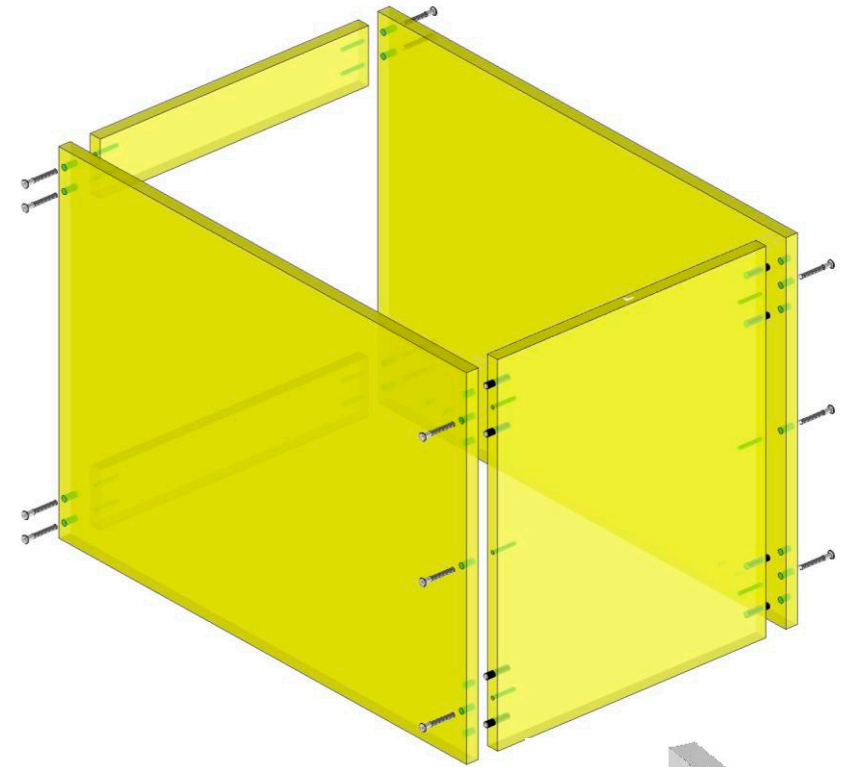


max 10mm

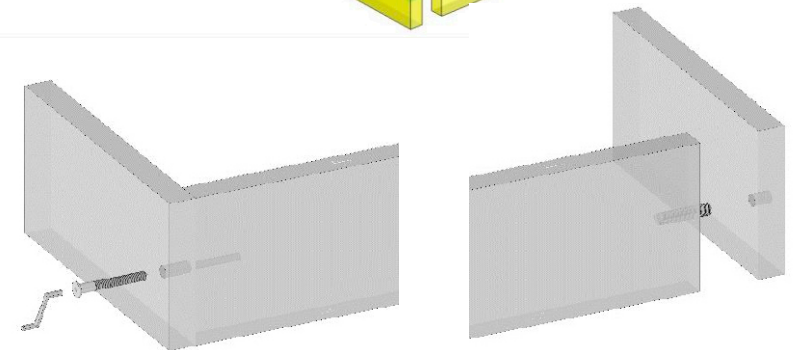

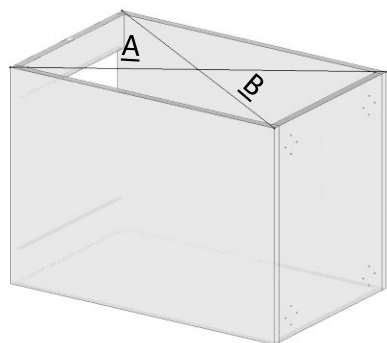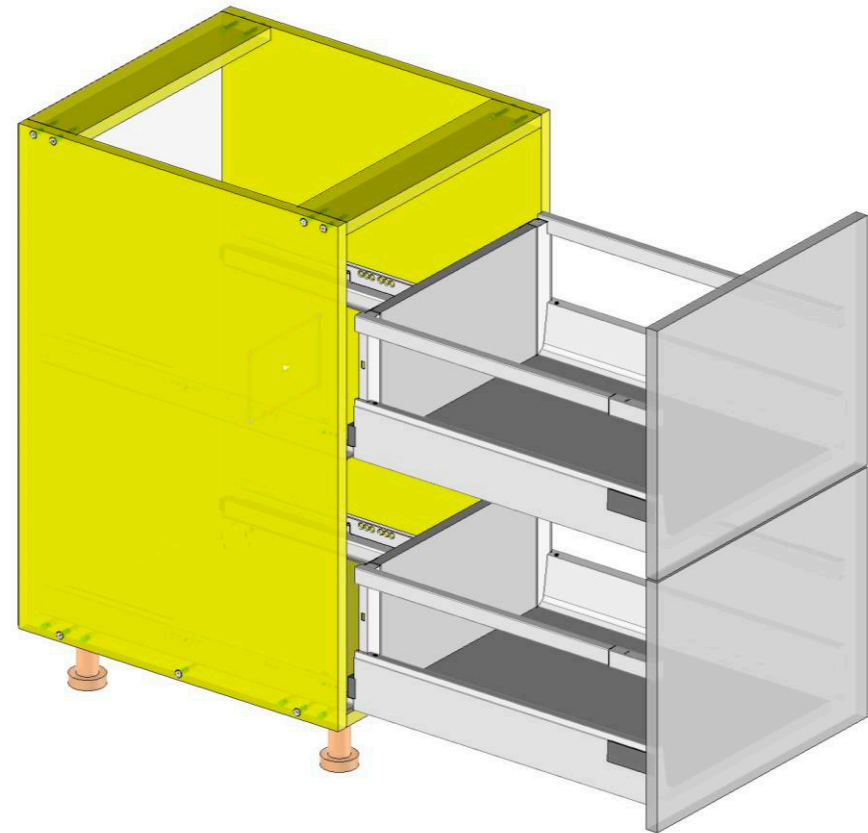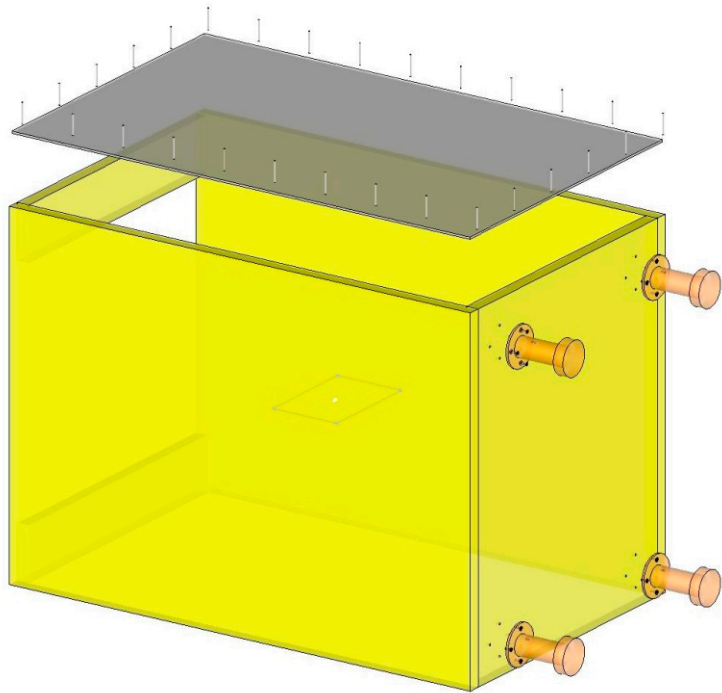

A=B

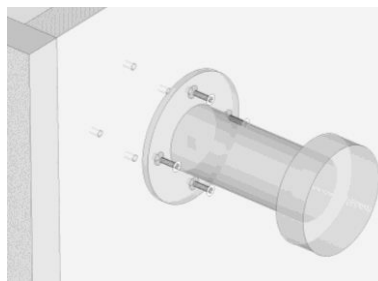



BASE CABINET – DRAWERS  
Assembled with the use of  
confirmats

